





Centennial™ Recorder Bell Ringer Option Installation Instructions

1. Remove the recorder's chassis from the backplate.
2. Remove the recorder's rear PC board from the chassis (four screws and two wire harnesses).
3. Fit the bell ringer option relay into its socket and secure it in place with the wire clip (see illustration).
4. (Applies only if the recorder is to control more than one signaling device) Gently pry the 0 ohm resistor out of position R32 and insert it into position R34.
5. Check to see that signal device(s) are connected to the recorder's terminal strip as follows:

If using line power to sound bells

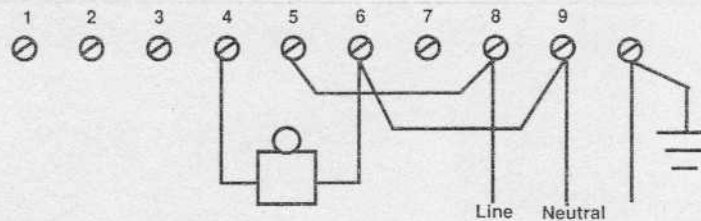

If using an external power source to sound bells

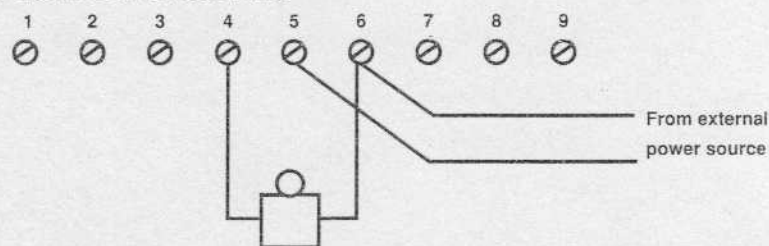

6. Connect the wire harnesses to the PC board. Then secure the PC board to the recorder's chassis.
7. Fit the chassis onto its backplate.

